

RouterBOARD mAP

The mAP 2nD is a small wireless AP device with 2 ethernet ports, Ether1 supports powering by PoE, Ether2 supports PoE output for powering another device. Depending on software configuration, it can function as a wireless client, an access point or a repeater.

First use

1. Connect your Internet cable to Ether1, and your PC to Ether2. If using the mAP to power another router using the PoE output feature, connect the router to Ether2, and use the built in wireless AP to configure the mAP.
2. Set computer/router IP configuration to *automatic* (DHCP).
3. Wireless AP mode is enabled by default, you can connect to the SSID "MikroTik". Log into your router from your web browser by opening 192.168.88.1 in the address bar.
4. The Ether2 port supports PoE output, with auto detection feature. This means you can connect Laptops and other non-PoE devices without damaging them. The PoE on Ether2 outputs approximately 2V below input voltage, and supports up to 0.5 A (So provided 24V PSU will provide 22 V / 0.5 A output to the Ether2 PoE port).

Powering

The device accepts powering from the power jack or from the first Ethernet port (Passive PoE):

- DC power jack (5.5 mm outside and 2 mm inside diameter, female, pin positive plug) accepts 8-57 V DC.
- The first Ethernet port accepts passive Power over Ethernet 11-57 V DC.
- mAP can also be powered with the built in microUSB port, using the USB 5 V power.

Under maximum load, the power consumption of this device is 4W (when not using PoE output)

Booting process

RouterOS includes many configuration options in addition to what is described in this document. We suggest to start here to get yourself accustomed to the possibilities: <http://mt.lv/help>

In case IP connection is not available, the Winbox tool (<http://mt.lv/winbox>) can be used to connect to the MAC address of the device from the LAN side (all access is blocked from the internet port by default). For recovery purposes, it is possible boot the device from network, see section Buttons and jumpers

Extension Slots and Ports

- Two 10/100 Ethernet ports, supporting automatic cross/straight cable connection (Auto MDI/X), so you can use either straight or cross-over cables for connecting to other network devices.
- One Integrated Wireless 2.4GHz 802.11b/g/n 2x2 dual chain MIMO, Onboard PIF antennas, max gain 1.2dBi.
- One microUSB 2.0 port.

Buttons and jumpers

RouterBOOT reset button has the following functions:

- Hold this button during boot time until LED light starts flashing, release the button to reset RouterOS configuration (total 5 seconds).
- Keep holding for 5 more seconds, LED turns solid, release now to turn on CAP mode. The device will now look for a CAPsMAN server (total 10 seconds).
- Or Keep holding the button for 5 more seconds until until LED turns off, then release it to make the RouterBOARD look for Netinstall servers (total 15 seconds).

Regardless of the above option used, the system will load the backup RouterBOOT loader if the button is pressed before power is applied to the device. Useful for RouterBOOT debugging and recovery.

Operating System Support

The device supports RouterOS software with the version number at or above what is indicated in the RouterOS menu `/system resource`. Other operating systems have not been tested.

Federal Communication Commission Interference Statement

FCC ID: TV7MAPL2ND

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.



This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT: Exposure to Radio Frequency Radiation.

20 cm minimum distance has to be maintained between the antenna and the user. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Industry Canada

IC: 7442A-MAP2ND

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



CE Declaration of Conformity

Full Declaration of Conformity (DoC) may be obtained by visiting our product page on <https://mikrotik.com>

[EN] English	Hereby, MIKROTIKLS SIA declares that this RouterBOARD is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EC.
[BG] Bulgarian	С настоящето, MIKROTIKLS SIA декларира, че RouterBOARD е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 2014/53/ЕС.
[CZ] Czech	MIKROTIKLS SIA tímto prohlašuje, že RouterBOARD splňuje základní požadavky a všechna příslušná ustanovení Směrnice 2014/53/ES.
[DK] Danish	Undertegnede MIKROTIKLS SIA erklærer herved, at følgende udstyr RouterBOARD overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EF.
[DE] German	Hiermit erklärt MIKROTIKLS SIA dass sich das Gerät RouterBOARD in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EG befindet.
[EE] Estonian	Käesolevaga kinnitab MIKROTIKLS SIA seadme RouterBOARD vastavust direktiivi 2014/53/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
[GR] Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ο ΚΑΤΑΣΚΕΥΑΣΤΗΣ MIKROTIKLS SIA ΔΗΛΩΝΕΙ ΟΤΙ RouterBOARD ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/ΕΚ
[ES] Spanish	Por la presente, MIKROTIKLS SIA declara que este RouterBOARD cumple con los requisitos esenciales y otras exigencias relevantes de la Directiva 2014/53/EC.
[IT] Italian	Con la presente MIKROTIKLS SIA dichiara che questo RouterBOARD è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/CE.
[LV] Latvian	Ar šo MIKROTIKLS SIA deklarē, ka RouterBOARD atbilst Direktīvas 2014/53/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
[LT] Lithuanian	Šiuo MIKROTIKLS SIA deklaruoja, kad šis RouterBOARD atitinka esminius reikalavimus ir kitas 2014/53/EB Direktyvos nuostatas
[HU] Hungarian	A MIKROTIKLS SIA ezzennel kijelenti, hogy a RouterBOARD típusú beren-dezés teljesít az alapvető követelményeket és más 2014/53/EK irányelvben meghatározott vonatkozó rendelkezések.
[NL] Dutch	Hierbij verklaart MIKROTIKLS SIA dat het toestel I RouterBOARD in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EG.
[PL] Polish	Niniejszym MIKROTIKLS SIA deklaruje że RouterBOARD jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami Dyrektywy 2014/53/EC.
[PT] Portuguese	Eu, MIKROTIKLS SIA declaro que o RouterBOARD cumpre os requisitos essenciais e outras provisões relevantes da Directiva 2014/53/EC.
[RO] Romanian	Prin prezenta, MIKROTIKLS SIA declară că aparatul RouterBOARD este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 2014/53/CE.
[SK] Slovak	MIKROTIKLS SIA tímto vyhlasuje, že RouterBOARD splňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/ES.
[SI] Slovenian	MIKROTIKLS SIA izjavlja, da je ta RouterBOARD v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 2014/53/ES.
[FI] Finish	MIKROTIKLS SIA vakuuttaa täten että RouterBOARD tyypipinen laite on direktiivin 2014/53/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
[SE] Swedish	Härmed intygar MIKROTIKLS SIA att denna RouterBOARD är i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EG.
[NO] Norwegian	MIKROTIKLS SIA Erklærer herved at RouterBOARD er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EF.

EN. Instruction manual: Connect the power adapter to turn on the device. Open 192.168.88.1 in your web browser, to configure it. More information on <http://mt.lv/help> **BG. Инструкция:** Свържете адаптера на захранване, [за да включите](#) устройството. Отворете 192.168.88.1 във веб браузър, [за да настроите](#) продукта. Повече информация в <http://mt.lv/help> **CZ. Návod k použití:** Připojte napájecí adaptér k zapnutí přístroje. Otevřete 192.168.88.1 ve webovém prohlížeči pro konfiguraci produktu. Více informací najdete v <http://mt.lv/help> **DK. Instruktionsbog:** Tilslut strømadaptern for at tænde for enheden. Åbn 192.168.88.1 i en webbrowser til at konfigurere produktet. Mere information i <http://mt.lv/help> **FR. Mode d'emploi:** Connectez l'adaptateur [d'alimentation pour allumer](#) l'appareil. Ouvrez 192.168.88.1 dans un navigateur Web pour configurer le produit. Plus d'informations dans <http://mt.lv/help> **DE. Bedienungsanleitung:** Verbinden Sie [das Netzteil](#), [um das Gerät einzuschalten](#). Öffnen Sie 192.168.88.1 in einem Web-Browser, [um das Produkt zu konfigurieren](#). Weitere Informationen im <http://mt.lv/help> **EE. Kasutusjuhend:** Ühendage toiteadapter seadme sisselülitamiseks. Avatud 192.168.88.1 in veebilehitseja seadistada toodet. Rohkem teavet <http://mt.lv/help> **ES. Manual de instrucciones:** Conecte el adaptador de alimentación para encender la unidad. Abra 192.168.88.1 en un navegador web para configurar el producto. Más información en <http://mt.lv/help> **IT. Manuale di istruzioni:** Collegare l'adattatore di alimentazione per accendere l'unità. Aprire 192.168.88.1 in un browser Web per configurare il prodotto. Maggiori informazioni in <http://mt.lv/help> **LV. Lietošanas instrukcija:** Pievienojiet strāvas adaptieri [lai ieslēgtu](#) ierīci. Atvērt 192.168.88.1 ar interneta pārlūku, [lai konfigurētu](#) produktu. Plašāka informācija <http://mt.lv/help> **LT. Naudojimosi instrukcija:** Prijunkite maitinimo adapteri įjunkite irenginį. Į interneto naršykę 192.168.88.1. Atidarykite galite konfigūruoti gaminį. Daugiau informacijos rasite <http://mt.lv/help> **HU. Használati utasítás:** Csatlakoztassa a hálózati adaptort a készülék bekapcsolásához. Megnyitása 192.168.88.1 egy webböngészőben beállítani a terméket. Több információ <http://mt.lv/help> **NL. Handleiding:** Sluit voedingsadapter aan op het apparaat in te schakelen. Open 192.168.88.1 in een webbrowser om het product te configureren. Meer informatie in <http://mt.lv/help> **PL. Instrukcja obsługi:** Podłącz adapter zasilania, aby włączyć urządzenie. Otwórz 192.168.88.1 w przeglądarce internetowej, aby skonfigurować urządzenie. Więcej informacji w <http://mt.lv/help> **PT. Manual de instruções:** Conecte o adaptador de alimentação para ligar o aparelho. Abra 192.168.88.1 em um navegador da web para configurar o produto. Mais informações em <http://mt.lv/help> **RO. Instrucțiuni de utilizare:** Conectați adaptorul de alimentare pentru a porni aparatul. Deschide 192.168.88.1 într-un browser web pentru a configura produsul. Mai multe informații în <http://mt.lv/help> **SK. Návod na použitie:** Pripojte napájací adaptér k zapnutiu prístroja. Otvorte 192.168.88.1 vo webovom prehliadači pre konfiguráciu produktu. Viac informácií nájdete v <http://mt.lv/help> **SI. Navodila:** Priključite napajalnik za vklop naprave. Odprite 192.168.88.1 v spletnem brskalniku nastaviti izdelek. Več informacij v <http://mt.lv/help> **FI. Käytöohje:** Kytke virtalähde päälle laitteeseen. Avaa 192.168.88.1 selaimen määrittää tuotteen. Lisää tietoa <http://mt.lv/help> **SE. Instruktionsmanual:** Anslut nätradaptern för att slå på enheten. Öppna 192.168.88.1 i en webbläsare för att konfigurera produkten. Mer information på <http://mt.lv/help> **NO. Bruksanvisningen:** Koble strømadaptern for å slå på enheten. Åpne 192.168.88.1 i en nettsleser for å konfigurere produktet. Mer informasjon på <http://mt.lv/help> **GR. εγχειρίδιο οδηγιών:** Συνδέστε τον προσαρμογέα τροφοδοσίας για να ενεργοποιήσετε τη μονάδα. Ανοίξτε 192.168.88.1 σε ένα πρόγραμμα περιήγησης στο Web για να διαμορφώσετε το προϊόν. Περισσότερες πληροφορίες στο <http://mt.lv/help>