



AirSpeed 1050 B3 Installation Guide

Part Number: DUG01593

System Release: 16.5

Revision: A

Published: December 2020

© Copyright by **Airspan Networks Inc.**, 2020. All rights reserved worldwide.

Legal Notices

The information contained within this document is proprietary, privileged and intended only for the recipient. As such, the information is subject to all relevant copyright, patent and other laws protecting intellectual property, as well as any specific agreements protecting Airspan Networks Ltd. rights in the aforesaid information. Neither this document nor the information contained herein may be published, reproduced, transmitted or disclosed to third parties, in whole or in part, without the express, prior, written permission of Airspan Networks Ltd. In addition, any use of this document or the information contained herein for the purposes other than those for which it is disclosed is strictly forbidden.

Airspan Networks Inc. reserves the right, without prior notice or liability, to make changes in equipment design or specifications.

Information supplied by Airspan Networks Ltd. is believed in good faith to be accurate and reliable, while every care has been taken in preparing these documents. However, Airspan Networks Ltd. does not make any representations and gives no warranties of whatever nature in respect of these documents, including without limitation, the accuracy or completeness of any information, facts and/or opinions contained therein. No responsibility is assumed by Airspan Networks Ltd. for the use of the documents nor for the rights of third parties which may be effected in any way by the use thereof. The provision of these documents (and the documents themselves) does not constitute professional advice of any kind. Any representation(s) in these documents concerning performance of Airspan Networks Ltd. product(s) are for informational purposes only and are not warranties of future performance, either expressed or implied. Airspan Networks Ltd., its affiliates, directors, employees and agents shall not be held liable for any damages or losses, of any nature whatsoever, arising from any use of and/or reliance on the documents.

These documents may contain flaws, omissions or typesetting errors; no warranty is granted nor liability assumed in relation thereto unless specifically undertaken in Airspan Networks Ltd. sales contract or order confirmation. Information contained herein is periodically updated and changes will be incorporated into subsequent editions. If you have encountered an error, please notify Airspan Networks Ltd.

Product performance figures quoted within this document are indicative and for information purposes only.

Table of Contents

Document Information.....	1
Document Approvals.....	1
Revision History	1
Warnings and Cautions.....	2
Human Exposure to Radio Frequencies	2
Avertissement et Precautions d'Utilisation	2
Radio Interference	2
Modifications	2
General	2
Général	3
⚠ Important Safety Instructions.....	3
Safety.....	3
Securite.....	4
Warning of Hazardous Voltages	4
Attention aux Voltages Hasardeux.....	5
Adherence to European Directive 2014/53/EU	5
Warning Symbols.....	5
Service Information	5
UL Information	6
Lightning Protection	6
Outdoor Cabling.....	7
DECLARATION OF CONFORMITY.....	7
GPS Compliance	9
Maximum Output TX Total Power	10
Power Consumption.....	10
Product Variants	10
Antenna System.....	11
About This Document	12
Purpose.....	12

Intended Audience	12
Related Reading	12
Customer Care Help Desk	13
Airspan Encourages Comments	13
1 Introduction	14
1.1 AirSpeed 1050 B3	14
1.1.1 Deployment	14
2 Verifying Prerequisites	16
2.1 Verify the Tools	16
2.2 Verify the Parts and Kits	16
3 Physical Description	18
3.1 AirSpeed 1050 B3 Physical Dimensions	18
3.2 Bottom View	19
3.3 Power... ..	19
3.3.1 Environmental	19
3.4 LEDs Display	20
4 Installation of AirSpeed 1050 B3	21
4.1 Mounting Adaptor Assembly	22
4.2 Mounting	22
4.2.1 Securing the Unit to the Pole Mounting Arm	22
Connect and Manage Cables.....	24
4.3 Connecting the Ground Cable	24
4.4 TX Power Monitoring Port	24
4.5 Cable Connection.....	24
4.5.1 AC Cable Preparation	25
4.5.2 Fiber Ethernet (SFP) Cable Preparation.....	30
4.5.3 Copper Ethernet Cable Preparation	34
5 Removal of AirSpeed 1050 B3	38
5.1 Tool Requirements	38
5.2 AC Cable Disconnection	38
5.3 Fiber Ethernet (SFP) Cable Disconnection	38

5.4 Copper Ethernet (RJ45) Cable Disconnection	38
5.5 Ground Cable Disconnection	38
5.6 AirSpeed Removal from the Pole Mounting Arm	39
A Job Sheet	40
B Abbreviations	41

Figures

Figure 1: AirSpeed 1050 B3	11
Figure 2: AirSpeed 1050 B3	15
Figure 3: AirSpeed 1050 B3 Overall Dimensions	18
Figure 4: AirSpeed 1050 B3 Bottom	19
Figure 5: Positioning Overview	21
Figure 6: Mounting Adaptor Assembly	22
Figure 7: Securing on Mounting Bracket	23
Figure 8: AirSpeed 1050 B3 on Pole Mounting Arm (example)	23
Figure 9: Ground Connection	24
Figure 10: Stripping Dimensions (AC Cable)	25
Figure 11: Open Housing Lock	25
Figure 12: Separate into Sections	26
Figure 13: Insert Gland Nut	26
Figure 14: Pass Cable Through	26
Figure 15: Insert Wire to Housing	27
Figure 16: AC Wire Placement	27
Figure 17: Tighten Three (3) Set Screws	27
Figure 18: Cable Click in Place	28
Figure 19: Place Split Rubber Gland	28
Figure 20: Gland Size on Edge	28
Figure 21: Place Tightening Cone on Split Gland	29
Figure 22: Tighten Gland Nut	29
Figure 23: Close the Lever	29
Figure 24: Secure Lock	29
Figure 25: AC Housing Lock Secured	30
Figure 26: Stripping Dimensions (SFP Cable)	30
Figure 27: Pre-assembled LC Duplex Cable	30
Figure 28: Open Housing Lock	31
Figure 29: Gland Nut on Cable	31

Figure 30: Insert Tightening Cone on Cable	31
Figure 31: Insert Rubber Gland on Cable	31
Figure 32: Pass Cable thru Housing	32
Figure 33: Insert Cable into Transceiver	32
Figure 34: Insert Holder over the Transceiver	32
Figure 35: Holder into Housing Base	32
Figure 36: Holder into Transceiver	33
Figure 37: Lift Lever	33
Figure 38: Insert Gland	33
Figure 39: Insert Cone	33
Figure 40: Tighten Gland Nut	34
Figure 41: Secure Housing Lock	34
Figure 42: Pre-assembled RJ45 Cable	34
Figure 43: Gland Nut on Cable	34
Figure 44: Insert Tightening Cone on Cable	35
Figure 45: Insert Rubber Gland on Cable	35
Figure 46: Insert Housing onto Cable	35
Figure 47: Insert Holder onto RJ45	35
Figure 48: Holder into Housing Base	36
Figure 49: Align RJ45 into Holder	36
Figure 50: Lift Lever	36
Figure 51: Insert Gland	36
Figure 52: Tighten Gland Nut	37
Figure 53: Secure Housing Lock	37
Figure 54: Removal from the Mounting Arm	39

Tables

Table 1: AirSpeed 1050 B3 FCC Maximum Output Total Power	10
Table 2: Power Consumption	10
Table 3: Variants	10
Table 4. Tool Requirements - Mounting	16
Table 5: AirSpeed 1050 B3 Components	16
Table 6. AirSpeed 1050 B3 Physical Dimensions	18
Table 7. AirSpeed 1050 B3 Material & Color	18
Table 8. AirSpeed 1050 B3 Environment Compliance	20
Table 9: LED Display	20
Table 10: Outdoor Power Cable Requirements	24
Table 11: Wire Pinout	27
Table 12: Recommended Gland Sizes	28

Table 13. Tool Requirements - Removal 38

Document Information

This document details procedures for installing the Airspan's AirSpeed 1050 B3 Pico-class LTE eNodeB variant.

Document Approvals

Department	Name	Role	Approval date
Product Management	YSH	Product Line Manager	
R&D	EPI	Digital HW Group Manager	

Revision History

Document owner: Yoav Shilo, PLM

Revision	Date	Summary of Changes	Created by
0.1 + 0.2	June 2019	Initial document & comments	MSF
0.3	July 2019	Modified from comments	MSF
A	August 2019	Publish	MSF
A1	August 2019	Added to recommended gland sizes	MSF
A2	September 2019	Added LED table, AC pinout & updated bracket	MSF
A3	December 2019	Added Removal instructions	MSF
A4	December 2020-	Updates	YSL

Warnings and Cautions

Human Exposure to Radio Frequencies

The AirSpeed 1050 B3 when operational should be operated from a minimum safe distance of 2.09ft (64cm).

Avertissement et Precautions d'Utilisation

Exposition des personnes aux fréquences radioélectriques

Les antennes d'AirSpeed 1050 B3 quand opérationnel doivent être installée et utilisée de façon à garantir la distance minimale de sécurité de 2.09ft. (64cm).

Radio Interference

This AirSpeed 1050 B3 generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the technician is encouraged to try to correct the interference by performing one or more of the following measures:

- Re-orientate or relocate the unit
- Increase separation between the units and/or End Device
- Connect the equipment to a circuit different from that to which the power source is connected

Modifications

Any changes and modifications to this device that are not expressly approved by Airspan Networks may void the user's authority to operate the equipment.

General

- Only qualified personnel should be allowed to install, replace, and service the equipment.
- The device cannot be sold retail, to the general public or by mail order. It must be sold to operators.
- Installation must be controlled.
- Installation must be performed by licensed professionals.
- Installation requires special training. The AirSpeed 1050 B3 radio and antenna should be installed ONLY by experienced installation professionals who are familiar with local building and safety codes and, wherever applicable, are licensed by the appropriate government regulatory authorities. Failure to do so may void Airspan's product warranty and may expose the end user or the service provider to legal and financial liabilities. Airspan and its resellers or distributors are not liable for injury, damage or violation of regulations associated with the installation of outdoor units or antennas.
- The device is to be installed in a Restricted Access Location.

Général

- Seul le personnel qualifié peut être autorisé pour installer ou remplacer l'équipement ainsi qu'effectuer les opérations de maintenance pour cet équipement.
- L'équipement ne peut pas être vendu en grande distribution ou par commande via email à destination du public. Il doit être vendu aux opérateurs de télécommunications.
- Son installation doit être contrôlée
- Son Installation doit être effectuée par des professionnels autorisés.
- Son installation requiert une formation spécifique du personnel. L'AirSpeed 1050 B3, radio et antenne doit être installée UNIQUEMENT par des installateurs professionnels expérimentés et ayant une connaissance des constructions locales et règles de sécurité, ainsi que, dès que nécessaire, disposant d'un agrément des autorités gouvernementales de régulation. Toute infraction à ces obligations peut annuler la garantie délivrée par Airspan pour ces produits et peut exposer l'utilisateur final ou le fournisseur de services à des dommages légaux et financiers.
- Airspan et ses revendeurs ou ses distributeurs ne sont pas responsables des blessures, dommages ou violations de la régulation en vigueur liées à l'installation du système extérieur ou des antennes.
- L'Équipement doit être installé dans une zone à accès réduit et contrôlé.

Important Safety Instructions

- Read and Save these instructions
- This Installation Guide contains instructions and warnings that should be followed during installation, and operation.
- Failure to follow these instructions could cause bodily injury and/or product failure.

Safety

1. Read this guide and follow all operating and safety instructions.
2. Supply cord is not shipped with the unit and is to be provided by user. Installation is to be performed by a qualified electrician according to local codes. Installation to be done in accordance with the National Electrical Code (NEC), ANSI/NFPA 70, the Canadian Electrical Code (CEC), Part I, CAN/CSA C22.1, and when applicable, the National Electrical Safety Code, IEEE C2.
3. Static sensitive components inside - do not remove the lid or base: No user serviceable parts inside.
4. The ground connection should be made before connecting to supply connections.
5. Position the power cord to avoid possible damage; do not overload circuits.
6. Do not place this product on or near a direct heat source, and avoid placing objects on the terminal.
7. To avoid electrical shock do not install this device during adverse conditions such as rain or inclement weather.
8. Use only a damp cloth for cleaning. Do not use liquid or aerosol cleaners. Disconnect the power before cleaning.
9. The units should not be located too near power lines or other electrical power circuits, where it can come into contact with such power lines or circuits.
10. The unit must be properly grounded to protect against power surges and accumulated static electricity. It is the user's responsibility to install this device in accordance with the local electrical codes.
11. Installation of the unit must be contracted to a professional installer.

12. The circuit breaker should be easily accessible in case you have to disconnect the device.
13. When installed in the final configuration, the product must comply with the applicable Safety Standards and regulatory requirements of the country in which it is installed. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.

Securete

1. Lire attentivement ce guide et suivre les instructions d'utilisation et de sécurité.
2. Le cordon d'alimentation n'est pas livré avec l'appareil et doit être fourni par l'utilisateur. L'installation doit être effectuée par un électricien qualifié conformément aux règles et standards locaux. L'installation doit être effectuée en conformité avec le Code national de l'électricité (NEC), ANSI / NFPA 70, le Code canadien de l'électricité (CCE), Partie I, CAN / CSA C22.1, et le cas échéant, le Code national de sécurité électrique, IEEE C2.
3. Des composants sensibles à l'électricité statique sont utilisés à l'intérieur. Ne pas retirer le coffre ou la base. Aucune pièce à l'intérieur est d'utilité pour l'utilisateur.
4. La connexion "terre" doit être effectuée en priorité et avant d'effectuer les connexions à la source d'alimentation (phase et neutre).
5. Positionner le cordon d'alimentation de façon à éviter des dommages potentiels. Ne pas surcharger les circuits.
6. Ne pas placer ce produit sur ou à proximité d'une source directe de chaleur et éviter de placer des objets sur le terminal.
7. Afin d'éviter des problèmes électriques, ne pas installer cet équipement au cours d'évènements climatiques difficiles comme averses ou météo non clémente.
8. Utiliser uniquement chiffon de coton pour nettoyage. Ne pas utiliser de produits liquides ou d'aérosols. Déconnecter le produit de la source d'alimentation avant nettoyage.
9. L'unité ne doit pas être située trop près de lignes électriques ou autres circuits de puissance, avec lesquels il pourrait entrer en contact.
10. L'émetteur radio doit être correctement relié à la terre afin de le protéger contre les surtensions ou accumulation d'électricité statique. L'utilisateur est tenu responsable de l'installation du produit conformément aux règles électriques en vigueur localement.
11. L'installation de l'unité doit être contractualisée avec un installateur professionnel.
12. L'interrupteur de circuit électrique doit être facilement accessible afin de pouvoir déconnecter l'équipement.
13. Lors de l'installation de la configuration finale, le produit doit être conforme aux Standards de Sécurité en vigueur ainsi qu'aux exigences réglementaires du pays dans lequel il est installé. Si nécessaire, consulter les agences réglementaires appropriées, ainsi que les autorités chargées de l'inspection afin de garantir la conformité.

Warning of Hazardous Voltages

On AC installations, hazardous voltages exist. Use caution when verifying or working with AC power. Remove metal jewellery that could come into contact with AC power.

On DC sections, short-circuiting the low voltage, low impedance circuits can cause severe arcing that may result in burns or eye damage. Remove rings, watches etc. to avoid shorting DC circuits.

Note: Airspan products do not contain hazardous substances (as defined in UK Control of Substances Hazardous to Health Regulations 1989 and the Dangerous Substances Regulations 1990). At the end of any Airspan products life cycle, the customer should consult with Airspan to ensure that the product is disposed of in conformance with the relevant regulatory requirements.

Attention aux Voltages Hasardeux

Sur les installations de réseau électrique de type courant alternatif (CA) , des voltages hasardeux peuvent survenir. Garder une Attention particulière lors d'une vérification ou de travaux sur réseau électrique CA. Retirer tous bijoux en métal qui pourraient entrer en contact avec l'alimentation ou le réseau CA.

Sur les portions de réseau électrique de type courant continu (CC), un circuit basse impédance peut causer de sérieux arcs électriques qui pourraient bruler ou endommager les yeux. Retirer bagues, anneaux, montres etc... afin d'éviter les court-circuit sur le réseau CC.

Adherence to European Directive 2014/53/EU

European Council Recommendation 2014/53/EU details basic restrictions and reference levels on human exposure to electromagnetic fields as advised by the ICNIRP. Adherence to these recommended restrictions and reference levels should provide a high level of protection as regards the established health effects that may result from exposure to electromagnetic fields.

Airspan equipment is compliant with CE and R&TTE regulations and can be operated in all EU (European Union) locations listed below:

Country Code			
BE	EL	LT	PT
BG	ES	LU	RO
CZ	FR	HU	SI
DK	HR	MT	SK
DE	IT	NL	FI
EE	CY	AT	SE
IE	LV	PL	UK

Warning Symbols

The following symbols may be encountered during installation or troubleshooting. These warning symbols mean danger. Bodily injury may result if you are not aware of the safety hazards involved in working with electrical equipment and radio transmitters. Familiarize yourself with standard safety practices before continuing.



Caution, hot surface



Caution



Electro-Magnetic Radiation



High Voltage (AC)



DC

Service Information

Refer all repairs to qualified service personnel. Do not modify any part of this device, as this will void the warranty.

Disconnect the power to this product and return it for service if the following conditions apply:

- a. The terminal does not function after following the operating instructions outlined in this manual.

- b. The product has been dropped or the housing is damaged.

Locate the serial number of the terminal and record this on your registration card for future reference. Also record the MAC address, located on the product sticker.

UL Information

- The equipment must be properly grounded according with NEC and other local safety code requirements.
- Reminder to system installers: Attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as is practical.
- AirSpeed 1050 B3 is designed to operate in environmental conditions complying with IP66 and relevant standards.

Lightning Protection

WARNING: The following notes are general recommendations for the system. The wireless equipment should be installed by a qualified professional installer and must follow local and national codes for electrical grounding and safety. Failure to meet safety requirements and/or use of non-standard practices and procedures could result in personal injury and damage to equipment. A direct lightning strike may cause serious damage even if these guidelines are followed.

All outdoor wireless equipment is susceptible to lightning damage from a direct hit or induced current from a near strike. Lightning protection and grounding practices in local and national electrical codes serve to minimize equipment damage, service outages, and serious injury. The antennas are to be DC grounded, so surge protection may not be required. Reasons for lightning damage are summarized as:

- Poorly grounded tower/antenna sites that can conduct high lightning strike energy into equipment.
- Lack of properly installed lightning protection equipment that can cause equipment failures from lightning induced currents.

A lightning protection system provides a means by which the energy may enter earth without passing through and damaging parts of a structure. A lightning protection system does not prevent lightning from striking; it provides a means for controlling it and preventing damage by providing a low resistance path for the discharge of energy to travel safely to ground. Improperly grounded connections are also a source of noise that can cause sensitive equipment to malfunction.

A good tower grounding system disperses most of the surge energy from a tower strike away from the building and equipment.

To limit the equipment damage due to a lightning strike, the following practices are recommended for the wireless system:

- Provide direct grounding from the antenna mounting bracket, the radio and antenna and the lightning/surge protectors to the same ground point at the base of the tower or a ground bus on the building. Use the grounding screws on the antenna bracket and the radio and antenna for terminating the ground wires.
- The circuit ground must be connected to the same grounding system as the unit.

Outdoor Cabling

- Connected cables should be outdoor grade with UV protection.
- Use shielded out CAT6 cabled terminated with metallic RJ45 connectors.
- Surge protection circuit must use a minimum 14AWG grounding cable.

DECLARATION OF CONFORMITY

Declaration of Conformity with Regard to the R&TTE Directive 2014/53/EU

Czech:

Airspan tímto prohlašuje, že tento přístroj je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53 / EU.

Danish:

Undertegnede, Airspan erklærer hermed, at følgende udstyrsenhed opfylder de væsentlige krav og andre relevante krav i direktiv 2014/53 / EF.

Deutsch:

Hiermit erklärt Airspan, dass die Produkteinheit die grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 2014/53 / EU erfüllt.

Estonian:

Käesolevaga kinnitab Airspan, et seadme seade vastab direktiivi 2014/53 / EL oluliste nõuetele ja muudele kõnealuse direktiivi asjakohastele sätetele.

English:

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Español:

Por medio de este Airspan, declara que la unidad cumple con los requisitos esenciales y cualquier otra disposición aplicable o exigible de la Directiva 2014/53 / UE.

Greek:

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΠΡΟΔΙΑΓΡΑΦΗ, η Airspan ΔΗΛΩΝΕΤΑΙ ότι η μονάδα συμμορφώνεται με τις ουσιώδεις απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 2014/53 / ΕΕ.

Français:

Airspan déclare par la présente que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53 / UE.

Italiano:

Con la presente Airspan dichiara che questa unità è conforme ai requisiti essenziali e alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53 / UE.

Latvian:

Ar šo Airspan paziņo, ka vienība atbilst Direktīvas 2014/53 / ES būtiskajām prasībām un citiem attiecīgajiem noteikumiem;

Lithuanian:

Šis „Airspan“ pareiškia, kad šis įrenginys atitinka esminius Direktyvos 2014/53 / ES reikalavimus ir kitas nuostatas.

Nederlands:

Airspan verklaart hierbij dat de apparaateenheid voldoet aan de essentiële vereisten en andere relevante bepalingen van richtlijn 2014/53 / EU.

Maltese:

Hawnhekk, Airspan, tiddikjara li din l-unità tikkonforma mar-rekwiżiti essenzjali u dispożizzjonijiet rilevanti oħra li jinsabu fid-Direttiva 2014/53 / UE.

Hungarian:

Alulírott, az Airspan kijelenti, hogy az egység megfelel a 2014/53 / EU irányelv vonatkozó alapvető követelményeinek és egyéb követelményeinek.

Polish:

Niniejszym Airspan oświadcza, że urządzenie jest zgodne z zasadniczymi wymaganiami i innymi odpowiednimi postanowieniami dyrektywy 2014/53 / UE.

Português:

Airspan declara que esta unidade está em conformidade com os requisitos essenciais e outras disposições da Diretiva 2014/53 / UE.

Slovenian:

Airspan izjavlja, da je ta enota skladna z bistvenimi zahtevami in drugimi ustreznimi določbami Direktive 2014/53 / EU.

Slovak:

Airspan týmto vyhlasuje, že tento prístroj spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53 / EU.

Suomalainen:

Airspan vakuuttaa täten, että laitteen tyyppi on direktiivin 2014/53 / EU olennaisten vaatimusten ja muiden asiaankuuluvien säännösten mukainen.

Swedish:

Därmed intygar Airspan att denna enhet överensstämmer med de väsentliga egenskapskraven och andra relevanta bestämmelser som anges i direktiv 2014/53 / EU.

Íslenska:

Airspan lýsir hér með yfir að þessi eining uppfylli grunnkröfur og aðrar kröfur tilskipunar 2014/53 / ESB.

Norsk:

Airspan erklærer herved at utstyrsenheten oppfyller grunnleggende krav og andre relevante krav i direktiv 2014/53 / EU.

Român:

Airspan declarăm pe propria răspundere că produsul produsului respectă cerințele esențiale și alte prevederi aplicabile din Directiva 2014/53 / UE.

The Declaration of Conformity related to this product can be obtained from PLM@Airspan.com.

GPS Compliance

The GPS is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC."

The GPS complies with the following EMC Common Regulatory Testing standards:

- EN55022: Radiated and Conducted Emissions
- CISPR 22: Class B
- EN 50081-1: Generic Emissions Class B
- EN 50082-1: Generic Immunity Class B
- EN 61000-4-2: Electrostatic Discharge Immunity
- EN 61000-4-3: Radiated RF EM Field Immunity Test
- EN 61000-4-4: Electrical Fast Transient/Burst Test
- EN 61000-4-6: Conducted Immunity
- EN 61000-4-8: Magnetic Field Immunity

Note: A GPS is recommended for synchronizing the unit (included in the system).

Note: An optional GPS Lightning/Surge protector is available from Airspan when installing the GPS antenna in a remote location for lightning prone deployments.

Maximum Output TX Total Power

Table 1: AirSpeed 1050 B3 FCC Maximum Output Total Power

Frequency Band (MHz)	TX (dBm) (per sector)	EIRP (dBm) (per sector)	Antenna Gain (dBi)	Variant
1825 - 1845	2x32	46	11	1050

Caution: Do not set maximum output TX power to higher than local regulations.

Power Consumption

AirSpeed 1050 B3 power consumption is described in the following table:

Table 2: Power Consumption

Duplex	Tx Power at RF Port (dBm)	Nominal Power Consumption (W)	Max Power Consumption (W)
FDD	4x 32	60	90
FDD	4x 34	75	105

Product Variants


Table 3: Variants

Product Name	Product Code	Description
AirSpeed 1050 B3-M1 Fiber BH, AC power	AS105-U03M1-B08A	AirSpeed 1050, 1825 - 1845 MHz (B3-M1), Fiber Backhaul, AC

Antenna System

The AirSpeed 1050 B3 includes embedded antennas: 2x SBA. Each SBA includes two antenna elements which can be switch on/off.

Figure 1: AirSpeed 1050 B3

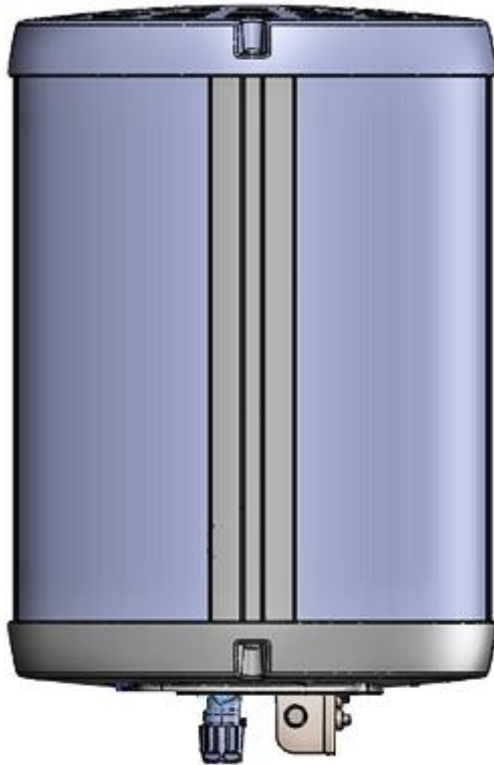

About This Document

Purpose

This guide provides the workflow and step-by-step procedures for Installing the AirSpeed 1050 B3. These procedures include:

- Verify prerequisites
- Install the AirSpeed 1050 B3
- Connect and manage cables

Intended Audience

This guide is intended for persons who are responsible for installing the AirSpeed 1050 B3 equipment. These persons should have a working knowledge of the equipment.

Related Reading

The following documents contain related information:

- AirSpeed 1050 B3 Product Datasheet
- Airspan LTE Commissioning Manual

Customer Care Help Desk

Airspan's *Customer Care Help Desk* offers prompt and efficient customer support services.

Note: To avail Airspan's *Customer Care Help Desk* support, you must be a registered user and must have a valid support contract. To register, click [here](#) and fill the **Registration** form.

To create and update issue logs, send e-mails to [Customer Care Help Desk](#). Once you submit your issue, the system generates a new issue and sends an issue number for your reference. The system uses this issue number to categorize and store e-mails under the appropriate issue.

To help *Customer Care Help Desk* identify your issue, include the issue number and your *Customer Care Helpdesk* account details in all further communications.

Main Operations

Airspan Communications Ltd.
Capital Point
33 Bath Road
Slough, Berkshire
SL1 3UF, United Kingdom
Tel: +44-1895-467-100

Worldwide Headquarters

Airspan Networks Inc.
777, Yamato Road, Suite 105
Boca Raton, FL 3341-4408, USA
Tel: +1 561 893 8670

Airspan Encourages Comments

Airspan welcomes any feedback and suggestions that help to improve the quality of the documentation. Send your feedback to documentfeedback@airspan.com.

1 Introduction

This section provides a descriptive overview of the Airspan's AirSpeed 1050 B3 variant(s) and its place in the Airspan product suite. AirSpeed 1050 B3 is a standalone product with fiber and copper backhaul. It includes dual sector access with SBA antenna. The product is aimed for outdoor deployment, on a pole top or side as well as wall mounting.

1.1 AirSpeed 1050 B3

AirSpeed 1050 B3 is part of Airspan's carrier-class LTE advanced outdoor family, a compact outdoor small cell with dual sector smart beam antennas

All Airspan products, including AirSpeed 1050 B3, are interoperable with a rich portfolio of 3rd party end user devices, including many handsets, indoor UEs, outdoor UEs and USB dongles from several ODMs, using various chipsets. For an updated of interoperability list, please contact your nearest Airspan Sales Representative.

Note: For management please refer to the Airspan LTE Commissioning Manual as well as the Netspan User Manual.

1.1.1 Deployment


AirSpeed 1050 B3 perfectly fits the requirements of the hard zoning outdoor locations such as city centers, parks, universities, and hotel facilities all due to its super compact one box form factor.

AirSpeed 1050 B3 creates a single install process for LTE Access and Backhaul, and enables "Just add Power" plug and play deployment method and along with the easy zoning of the product saving deployment related costs and time.

Note: The following is for illustration only; actual layout may differ as infrastructure is installation-specific.

Note: AirSpeed 1050 B3 must be properly grounded according with NEC and other local safety code requirements.

Figure 2: AirSpeed 1050 B3

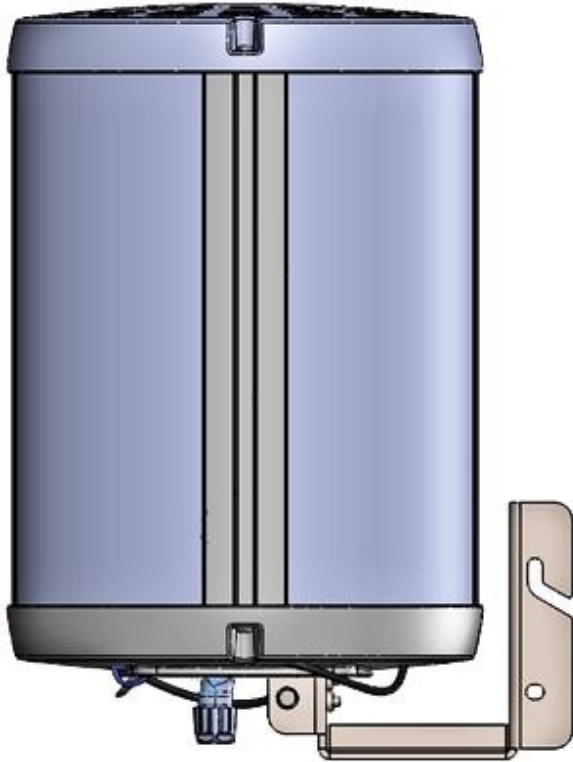

Note: The illustration above displays the AirSpeed 1050 B3 unit (with mounting adaptor).

2 Verifying Prerequisites

Prior to installing the AirSpeed 1050 B3, verify the required safety, power, tools, parts and components. This chapter includes the hardware, software, and client requirements for installation. Verify the availability of:

- AirSpeed 1050 B3 unit
- Mounting adaptor (ordered separately)
- SFP / RJ45 connectors adaptors (ordered separately)
- Desired location with available power source

2.1 Verify the Tools

Table 4. Tool Requirements - Mounting

Tool	Use
Large flat bladed screwdriver	securing the pole straps
13 mm wrench	for securing the M8 bolts
13 mm torque wrench	for final tightening of the M8 bolts (Tighten to a torque of no more than 15 Nm (11 ft-lb) max.)
Knife	For cable preparation
Small side cutters	For power cable preparation
Wire strippers	For power cable preparation

2.2 Verify the Parts and Kits

Note: Verify order and requirements to ensure the correct unit type is being installed.

Note: Currently available - AS105-U03M1-B08A

Table 5: AirSpeed 1050 B3 Components

Installation Kit / Part	Product Code	AS P/N	Description
AirSpeed 1050 B3 B40 Fiber + copper BH, AC power	AS105-U03M1-B08A	998-73-033RK	AirSpeed 1050, 1825-1845MHz (B03), Copper Backhaul, AC <ul style="list-style-type: none"> • Nut, M6, Full, SS, A2, DIN934 (x2) • Spring Lock Washer M6 SQ End SS A2 DIN127B (x2) • HEX Head Screw M6x30mm, SS A2 DIN933 (x1)
Mounting Adaptor	AS105-U-PMADPT-1	402-00-841	Mounting Adaptor for TEPCO (ordered separately)
External Plug			
Connector Adapter power	CON-ADP-OCT-PWR-1	300-50-135	Power AC - 3 position power(26mm pitch) Screw Version & metal/plastic tie (Included)


Installation Kit / Part	Product Code	AS P/N	Description
Connector Adapter SFP	CON-ADP-OCT-SFP-1	10135746	OCTIS Connector Adapter SFP (ordered separately)
Connector Adapter RJ45	CON-ADP-OCT-RJ45-1	300-20-062	ETH - RJ45 connector ,Right (R) pitch 26mm (ordered separately)

3 Physical Description

AirSpeed 1050 B3 is in an all outdoor enclosure.

This section provides the physical attributes of the AirSpeed 1050 B3.

Figure 3: AirSpeed 1050 B3 Overall Dimensions

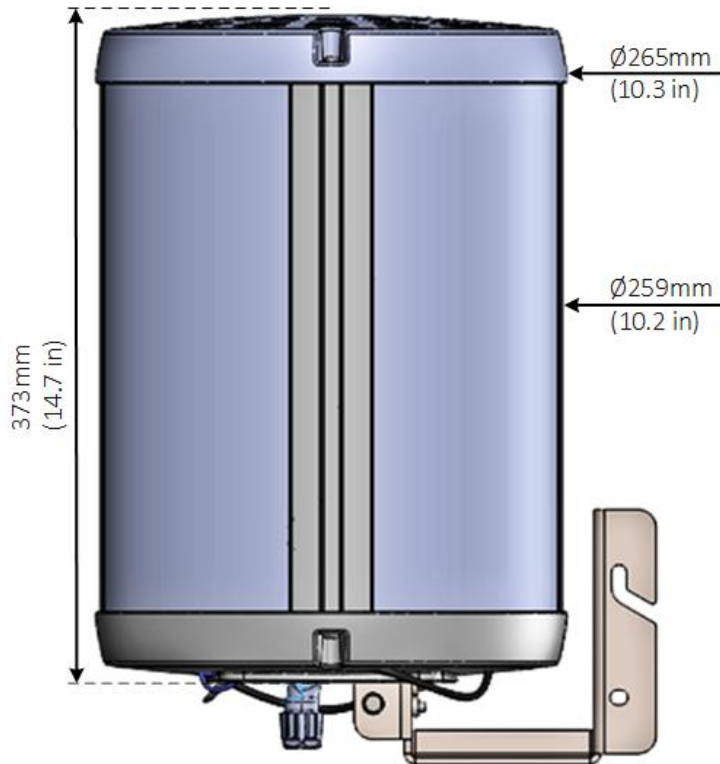

3.1 AirSpeed 1050 B3 Physical Dimensions

Table 6. AirSpeed 1050 B3 Physical Dimensions

	Dimensions (H x Ø)	Comment
Dimensions	373x 260 mm (14.7 x 10.2)	The physical dimensions exclude connectors and mounting adaptor
Weight	12.3Kg (29.9Lbs.)	Weight of mounting adaptor is 1.5 Kg in addition to the unit weight.


Table 7. AirSpeed 1050 B3 Material & Color

Material	Color
ASA (main radome)	RAL9002
PC (top & bottom radomes)	RAL7040

3.2 Bottom View

The following figure shows the AirSpeed 1050 B3 from the bottom.

Figure 4: AirSpeed 1050 B3 Bottom

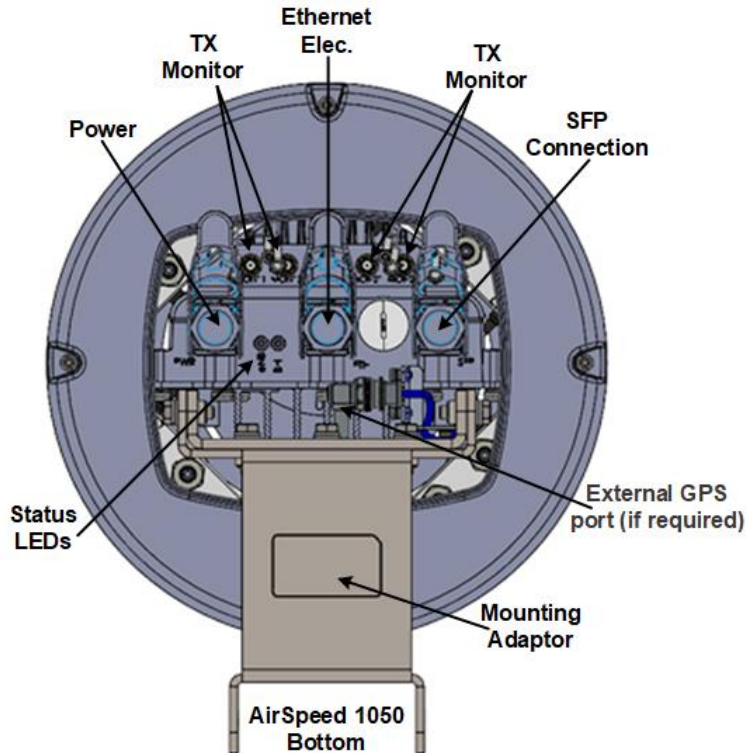

3.3 Power

AirSpeed 1050 B3 supports direct connection to AC power source.

Operational Voltage Range:

- AC - 90~240 VAC, 50-60Hz

3.3.1 Environmental

Note: AirSpeed 1050 B3 is not meant to be used in a Marine environment.

AirSpeed 1050 B3 meets the following environmental requirements:

- GR-63 Storage and Transportation
- ETSI EN 300-019-1-4 Operational (non-weather protected equipment)
- ETSI EN 300-019-1-1 Storage (weather protected, not temperature controlled locations)
- ETSI EN 300-019-1-2 Transportation

Table 8. AirSpeed 1050 B3 Environment Compliance

Type	Details
Operating temperature	-40°C to 55°C / -40°F to 131°F
Operating humidity	5% - 100% non-condensing
Storage temperature	-40°C to 70° C / -40°F to 158°F
Rain and dust ingress protection	IP66

3.4 LEDs Display

Two (2) LEDs appear on the bottom of the unit, providing unit status indication.

When powering up refer to the following table for indication of current status:

Table 9: LED Display

Name	Color	Status	Description
Powering Up	Orange	On Continuously	Till the eNodeB SW starts loading
Software loading	Green	Blinking (3Hz)	While SW is loading
Normal Operation	Green	On Continuously	Normal operation (radiating)
Major Alarm	Red	Blinking (3Hz)	Service not affected
Critical alarm or Sector OOS	Red	On Continuously	Service affected

4 Installation of AirSpeed 1050 B3

AirSpeed 1050 B3 is installed on a pole. Prior to installation of the AirSpeed unit a mounting arm (not supplied) must first be affixed in place on the Pole.

Caution: Proper local rigging and hoisting practices should be followed when installing the AirSpeed 1050 B3.

Note: When installing the unit, a minimum gap of at least 35cm above the unit (so as to NOT block airflow) and a minimum gap of 20cm below the unit should be kept. In the event of any heat radiating source below the unit widen the gap.

Recommended: When installing the unit, care should be taken so that the unit should be distanced from any obstructions above that can interfere with “clear sky” conditions needed for good GPS reception. It is recommended to install the unit in a location which enable GPS reception from at least four satellites (can be tested with general mobile application).


In the event this is unavoidable there is the option to use a remote GPS installation using an external antenna.

Note: There should be no other devices mounted on either side of the unit so as NOT to interfere with the antennas.

Note: Installation should take into consideration the antenna(s) and Sector(s) direction for maximum coverage.

Note: Installation should be so the antenna(s) are positioned as shown below for maximum coverage.

Figure 5: Positioning Overview

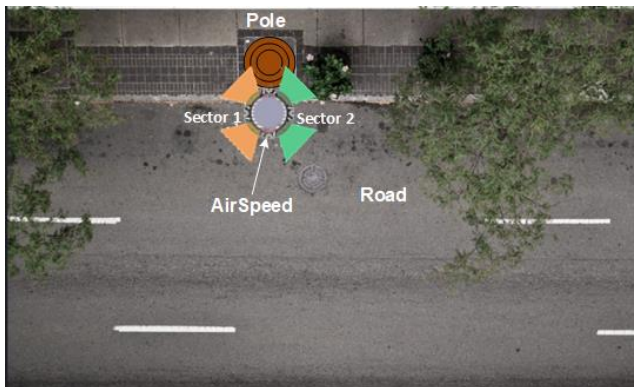


4.1 Mounting Adaptor Assembly

Prior to installation the Mounting Adaptor must be assembled on the AirSpeed unit, (unless pre-assembled).

1. Lie the unit on its side to expose the bottom.
2. Slide the mounting adaptor onto the inner bracket on the AirSpeed 1050 bottom.
3. Line up the five (5) holes.
4. Insert and screw in the five (5) Allen (M6 X 20) screws to tighten, as shown below.

Figure 6: Mounting Adaptor Assembly

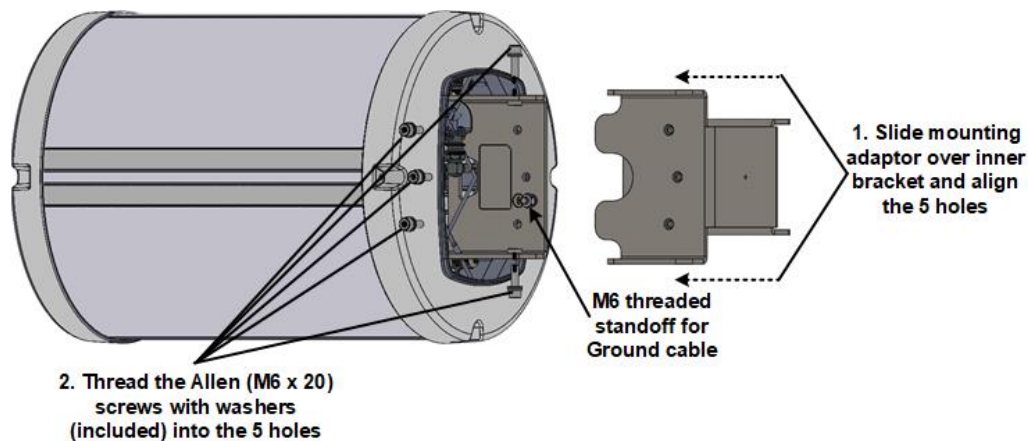

Note: Using a #5 Allen wrench, tighten to a torque of no more than 5.2 Nm (46.02 in-lbs.) max.

4.2 Mounting

The following images show the assembly of the AirSpeed 1050 B3 onto the pole mounting arm (not supplied, responsibility of the installer).


Note: The following pictures are for illustration purposes only.

4.2.1 Securing the Unit to the Pole Mounting Arm

To mount the AirSpeed unit to the pole mounting arm (not supplied), perform the following:

1. Verify that the two (2) upper bolts are loose and that there is enough clearance for the AirSpeed unit's upper slots to slide onto the bolts.
2. Lift the unit and slide the mounting adaptor onto the pole mounting arm bolts.
3. Hand tighten the bolts to prevent the AirSpeed unit from disengaging. Do **Not** fully tighten the bolts yet.

Figure 7: Securing on Mounting Bracket

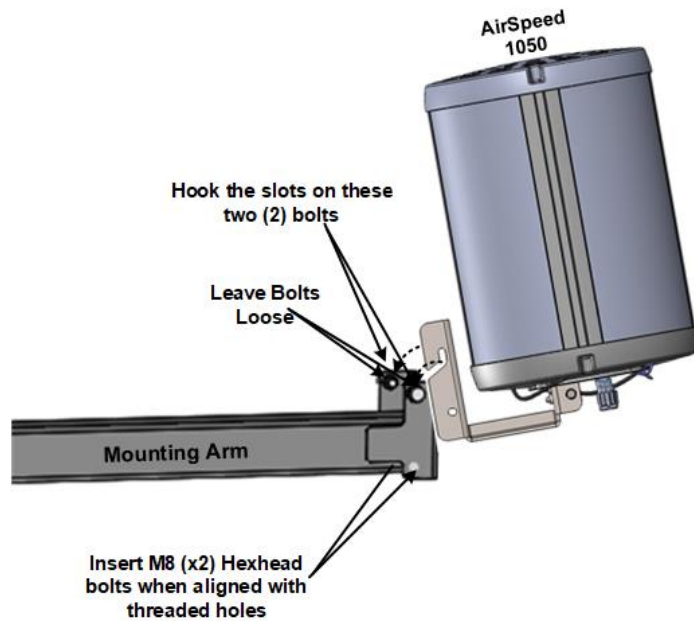


4. With the bolts engaged on the upper part of the unit swing the unit in-line with the bottom threaded holes and insert the provided M8 bolts with split washer and flat washers on both sides.
5. Gradually tighten the four (4) bolts to fix the AirSpeed 1050 in place, tightened to a torque of no more than 15 Nm (11 ft-lb) max. (M8 bolt). Work in an alternating pattern, this will ensure that the stress is applied evenly as the bolts are tightened.

Note: Using higher than specified tightening torque might damage the unit or mounting arm.

Note: Use an appropriate wrench only and tighten with caution so as not to cause damage to the paint.

Figure 8: AirSpeed 1050 B3 on Pole Mounting Arm (example)

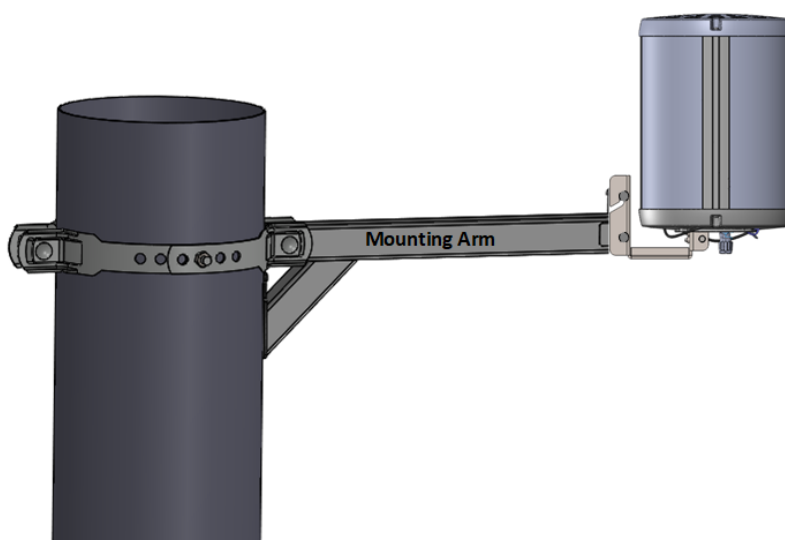

Connect and Manage Cables


4.3 Connecting the Ground Cable

Connect the ground lug with the ground cable (not supplied) to the M6 threaded bolt on the bracket assembled on the unit clearly marked with the universal ground symbol.

Note: Cutting the ground cable to the required length and crimping the grounding lug is performed by the Installer.

The cable should be grounded according to international or local standards.

Figure 9: Ground Connection

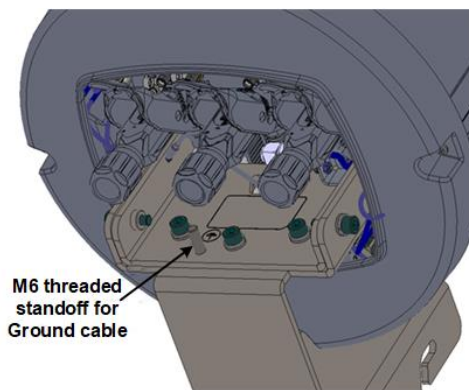

4.4 TX Power Monitoring Port

There is the option to monitor TX power via the available monitoring ports (SMA Jack B/H) found on the bottom of the AirSpeed 1050 B3 unit. See Figure 4: AirSpeed 1050 B3 Bottom.

4.5 Cable Connection

The following explains the general instructions on how to connect a power cable (AC) and the SFP & Copper Ethernet cables to the AirSpeed 1050 B3 unit.

Danger: Hazardous voltage! Before working, ensure that the power is removed from the power connection cables. When the system is powered on, **do not touch the power terminals.**

Airspan recommends the following outdoor Power cable requirements – Cable, 3C, SJOOW, 18AWG, Stranded, Outdoor.

Table 10: Outdoor Power Cable Requirements

Outdoor Power Cable
18 AWG
Jacket 300V
Water Resistant
UV Resistant

Tip: It is good practice to label both ends of the cable to identify which AirSpeed 1050 B3 unit it is connected to.

Tip: It is good practice to leave a spare loop of cable (approximately 0.5m). This will allow for easier wiring and will allow the cable to be re-terminated if necessary in the future.

Note: When securing the cable make sure there is no tension on the cable so that it is easy to disconnect and re-connect for future maintenance actions.

4.5.1 AC Cable Preparation

Caution: Safety - Disconnection of power supply

- When AirSpeed unit is connected directly to wiring a suitably rated and easily accessible circuit breaker shall be incorporated externally to the equipment.
- Power source disconnection is required before disconnecting the power connector.

Warning: This unit incorporates **double pole/neutral fusing**. Both the Line & Neutral have fuses in them.


Warning: The onsite source circuit breaker (6A) should be gang operated, **two (2) pole** (single phase type).

Note: Required AC power cable – 3 wire - 18 AWG within a pipe enclosure, connected directly to the building electrical power supply.

The following displays the proper steps for AC cable preparation:


1. Strip back and remove the outer sheath to expose the inner insulated wires to a length of 34mm max (1.34 in). Then strip back 8mm± 2 (0.31 in) of the inner core insulation.

Figure 10: Stripping Dimensions (AC Cable)

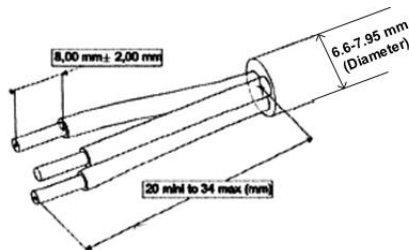


2. Open the housing lock by sliding up then lift the clamp handle.

Figure 11: Open Housing Lock

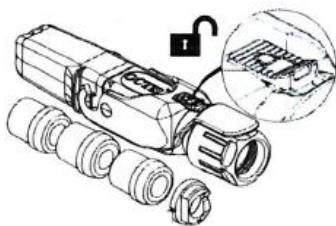


3. Separate the housing into its component sections.

Figure 12: Separate into Sections

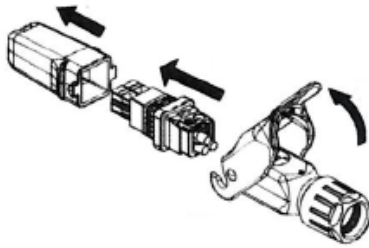


4. Insert the Gland nut through the other end of the cable.

Figure 13: Insert Gland Nut

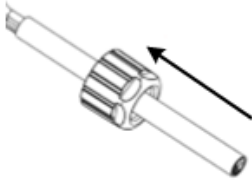

5. Feed the end of the source power cable through the housing of the AC connector.


Figure 14: Pass Cable Through

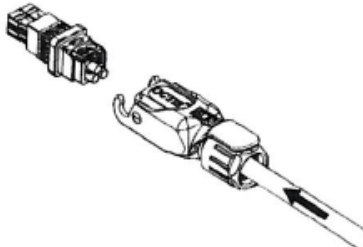

6. Insert the prepared ends of the cable into the inner part of the connector housing.

Caution: Verify the wire polarity before securing.

Figure 15: Insert Wire to Housing

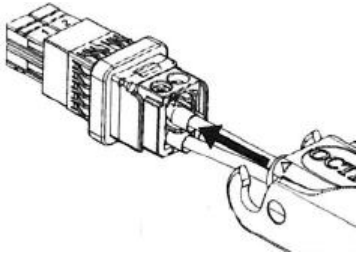

7. Verify the wires are in their correct stations.

Figure 16: AC Wire Placement


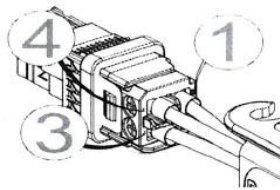


Table 11: Wire Pinout

Connection	Position #
Ground	1
Line	4
Neutral	3


8. Tighten the three (3) set screws as shown below.

Figure 17: Tighten Three (3) Set Screws

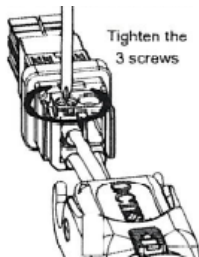


9. Insert into outer housing until "click" in place, align marks for proper alignment.

Figure 18: Cable Click in Place

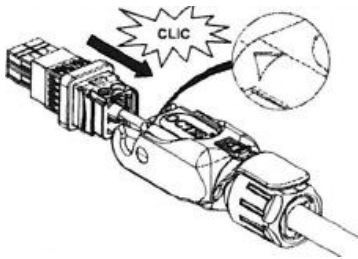

10. Place the split rubber gland onto the cable.

Figure 19: Place Split Rubber Gland

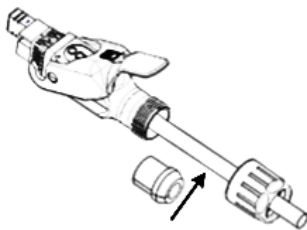


11. Verify the gland size as shown below.

Table 12: Recommended Gland Sizes

Cable Diameter	Recommended Gland Size
From 6.6mm Min to 7.95mm Max	"Φ8"
From 7.6mm Min to 8.95mm Max	"Φ9"
From 8.6mm Min to 9.95mm Max	"Φ10"


Note: The gland size is written on the edge of the gland.

Figure 20: Gland Size on Edge

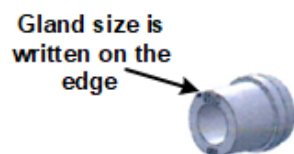


Note: The tolerances of the diameter should be taken into account to make sure it is always within the specified range.

12. Place the tightening cone onto the split rubber gland.

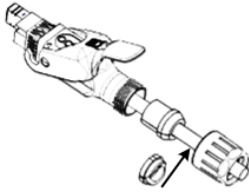
Figure 21: Place Tightening Cone on Split Gland

-
13. Secure the Gland nut on to the body forcing the seal to compress around the power cable, then tighten the Gland nut with a 21mm wrench.


Caution: Do not over tighten the Gland nut. The Gland nut should be tightened to a torque of **no** more than 2.5-3.0 Nm (1.84 – 2.21 ft-lb) max.

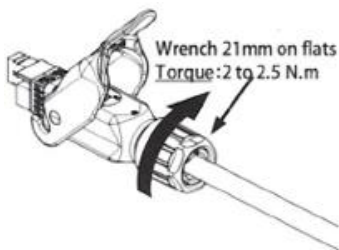Figure 22: Tighten Gland Nut

-
14. After tightening the gland nut, close the lever.

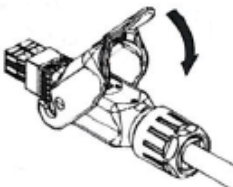Figure 23: Close the Lever


-
15. Secure the lock by sliding the secondary lock/button into the locked position.

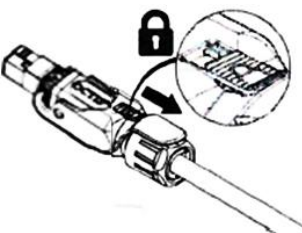Figure 24: Secure Lock

-
16. Secure the lever with the Metal/Plastic tie to prevent accidental unlocking, the assembly is now complete.

Note: After locking the secondary lock/button and lever, it is required to fasten down the lever mechanism with the supplied metal/plastic tie (to prevent easy opening) and verify that it is secure, as shown below.

Figure 25: AC Housing Lock Secured

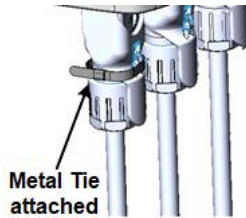

Note: When securing the cable verify there is no tension on the connector so that it is easy to disconnect and re-connect for future maintenance actions.

4.5.2 Fiber Ethernet (SFP) Cable Preparation


Note: Additional parts required for the SFP assembly:

- LC Duplex cable assembly
- SFP Transceiver

The following displays the proper steps for SFP cable preparation:


1. Have the pre-assembled LC Duplex cable assembly ready.

 Figure 26: Stripping Dimensions (SFP Cable)




Note: Diameter of cable is in the 4.8 to 5.8 mm (0.19-0.23 in) range.


Figure 27: Pre-assembled LC Duplex Cable

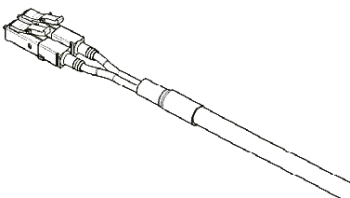


1. Open the housing lock by sliding up then lift the clamp handle,

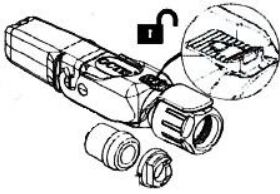Figure 28: Open Housing Lock

2. Separate the housing into its component sections.
3. Insert the gland nut through the front end of LC Duplex assembly.

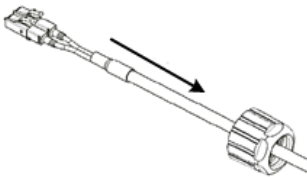
Figure 29: Gland Nut on Cable

4. Insert the “split tightening cone” from the side of the cable.

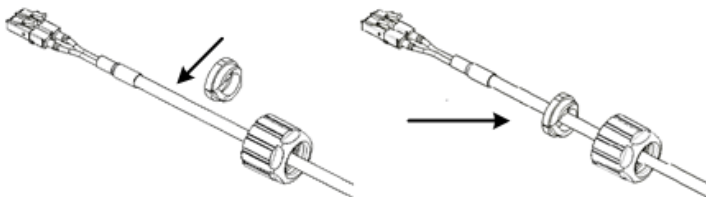Figure 30: Insert Tightening Cone on Cable


5. Insert the “split rubber gland” from side of the cable.

For recommended gland size see Table 12: Recommended Gland Size

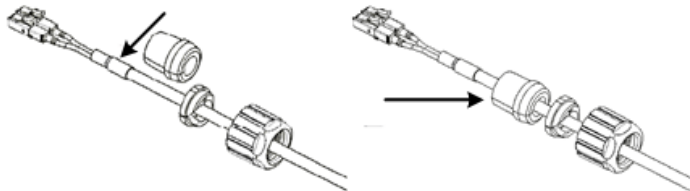Figure 31: Insert Rubber Gland on Cable


6. Pass the LC Duplex cable thru the housing.

Figure 32: Pass Cable thru Housing

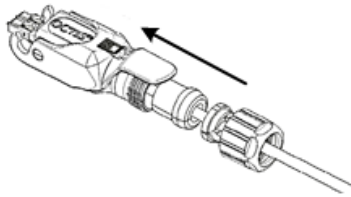


7. Insert the LC Duplex cable into the transceiver. A “click” is heard when engaged.

Figure 33: Insert Cable into Transceiver

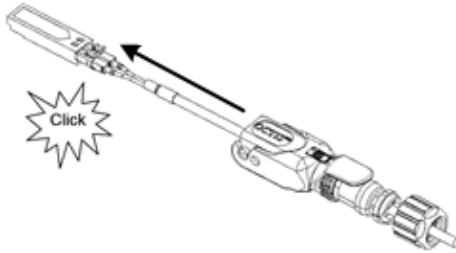


8. Insert the holder subset section from the front end of Transceiver.

Figure 34: Insert Holder over the Transceiver

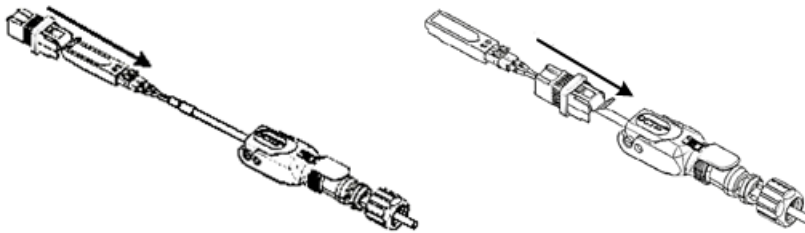


9. Fix the holder into the housing base. A “click” is heard when engaged.

Figure 35: Holder into Housing Base

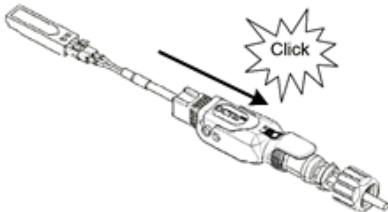


10. Secure the holder into the transceiver, “click” when engaged.

Figure 36: Holder into Transceiver

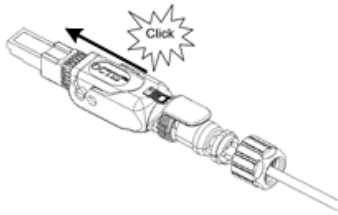


11. Lift the lever of housing base slightly so that the rubber gland, tightening cone and gland nut can be inserted and tightened correctly.

Figure 37: Lift Lever

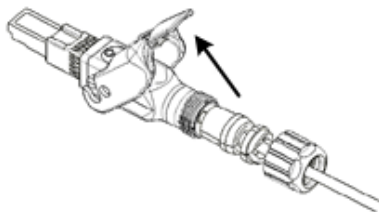


12. Push to insert the rubber gland.

Figure 38: Insert Gland

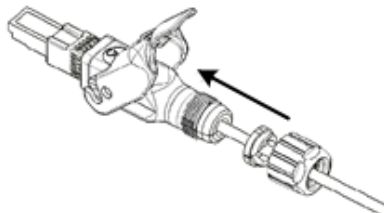


13. Push to insert the tightening cone.


Figure 39: Insert Cone

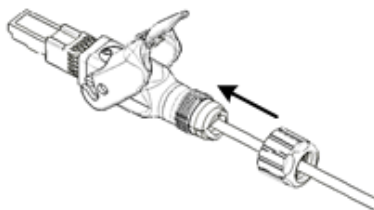

14. Tighten the gland nut with a 21mm wrench, to a torque of no more than 2-2.5 Nm (1.47 – 1.84 ft-lb) max.

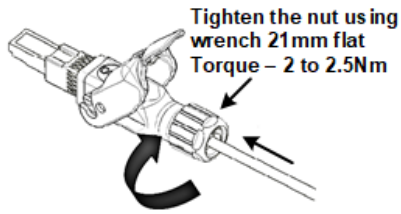Figure 40: Tighten Gland Nut

15. Secure the lock by sliding the secondary lock/button, so that lever can't be lifted; assembly is now ready for insertion.

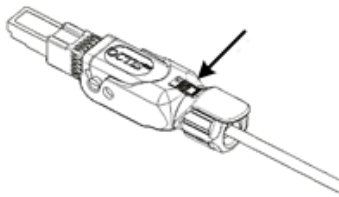Figure 41: Secure Housing Lock


4.5.3 Copper Ethernet Cable Preparation

Note: A pre-assembled RJ45 cable is required for the Copper Ethernet assembly.


The following displays the proper steps for the Copper (ETH) cable preparation:

1. Have the pre-assembled RJ45 cable assembly ready.

Note: Diameter of cable is in the 6 to 7mm (0.24-0.28) range.

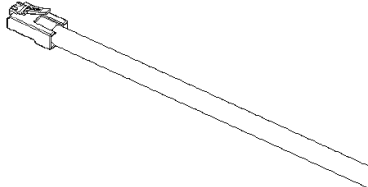Figure 42: Pre-assembled RJ45 Cable


2. Insert the gland nut through the front end of RJ45 assembly.

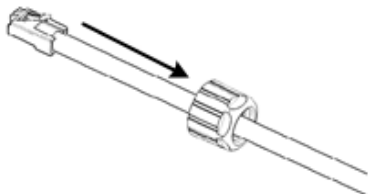Figure 43: Gland Nut on Cable

3. Insert the "split tightening cone" from the side of the cable.

For recommended gland size see Table 12: Recommended Gland Size


Figure 44: Insert Tightening Cone on Cable

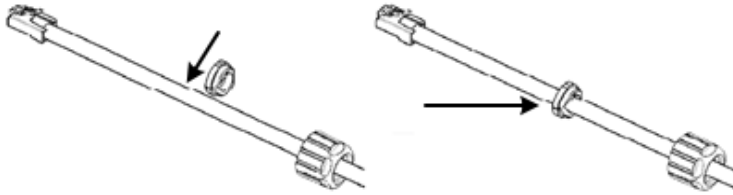

4. Insert the “split rubber gland” from side of the cable.


Note: Inner diameter of rubber gland is in the range of 7 to 8mm (0.28-0.31) range.

Figure 45: Insert Rubber Gland on Cable

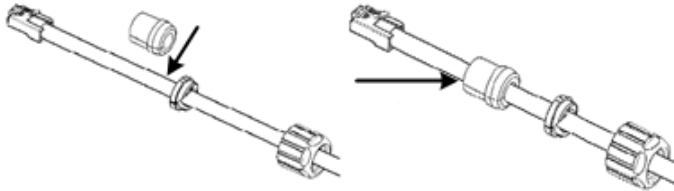


5. Insert the housing onto the RJ45 cable.

Figure 46: Insert Housing onto Cable

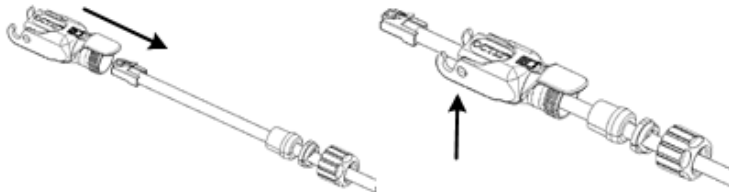


6. Insert the holder section onto the front of the RJ45.


Figure 47: Insert Holder onto RJ45

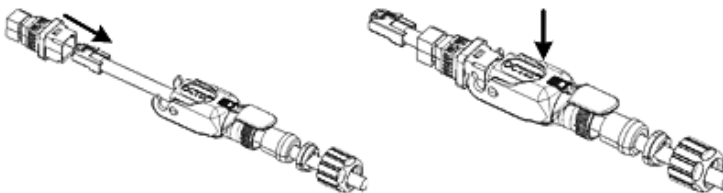


7. Fix the holder into the housing base. A “click” is heard when engaged.

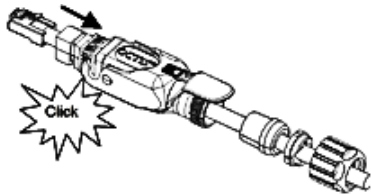Figure 48: Holder into Housing Base


8. Ensure correct alignment of the RJ45 in the hosing by raising the lever to allow free movement and then push the RJ45 plug into the plug cap to ensure proper location, then lock the cap.

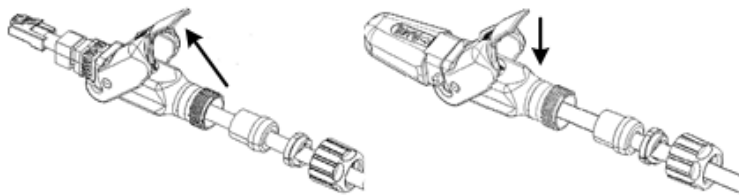Figure 49: Align RJ45 into Holder

9. Lift the lever of housing base slightly so that the rubber gland, tightening cone and gland nut can be inserted and tightened correctly.

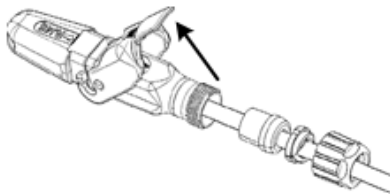
Figure 50: Lift Lever

10. Push the rubber gland to insert in place then push the tightening cone to insert in place.

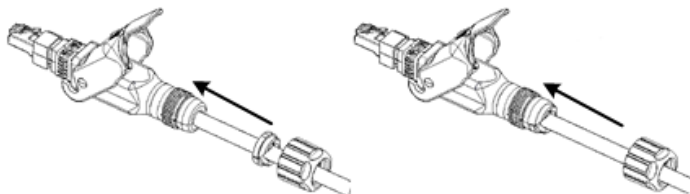Figure 51: Insert Gland


11. Tighten the gland nut with a 21mm wrench, to a torque of no more than 2-2.5 Nm (1.47 – 1.84 ft-lb) max.

Figure 52: Tighten Gland Nut

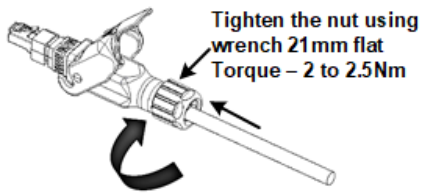

12. Close the lever and secure the lock by sliding the secondary lock/button, so that lever can't be lifted; assembly is now ready for insertion.
-

Figure 53: Secure Housing Lock

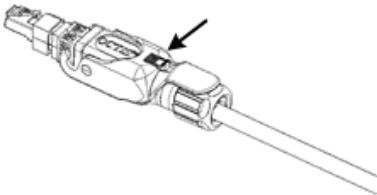

5 Removal of AirSpeed 1050 B3

The following steps define removal procedure for the AirSpeed 1050 when required (for replacement).

5.1 Tool Requirements

The following defines the tools required for safe removal of the AirSpeed unit.

Table 13. Tool Requirements - Removal

Tool	Use
13 mm wrench	For loosening and removal of the M8 bolts
Wire Cutters / Snippers	To cut the metal/plastic tie on the AC (power) connector
	Good to have
Electrical tape (insulating tape)	To isolate loose cables
Cable Ties (self-locking)	To isolate loose cables

Note: Prior to removal of the AirSpeed unit verify that the unit is powered down (electricity is off).

5.2 AC Cable Disconnection

1. Carefully cut the Metal/Plastic tie on the AC cable connector, which is holding the locking lever mechanism closed.
2. Grasp the sides of the AC cable connector housing and slide the secondary lock up to disengage it.
3. Lift up the locking lever to open.
4. Gently remove the AC cable housing from the Power port of the AirSpeed unit.

5.3 Fiber Ethernet (SFP) Cable Disconnection

1. Grasp the sides of the SFP Transceiver housing and slide the secondary lock up.
2. Lift up the locking lever to open.
3. Gently remove the SFP cable housing from the Fiber Ethernet port of the AirSpeed unit.

5.4 Copper Ethernet (RJ45) Cable Disconnection

1. Grasp the sides of the Copper Ethernet housing and slide the secondary lock up.
2. Lift up the locking lever to open.
3. Gently remove the Copper Ethernet housing from the Ethernet port of the AirSpeed unit.

5.5 Ground Cable Disconnection

1. Remove the nut from the M6 threaded bolt on the unit and disconnect the ground cable from the bolt on the bracket assembled on the unit.
2. Gather the four (4) cables and bundle them together with a cable tie.


3. Take all the bundled cables and temporarily fasten them to the mounting arm using the electrical tape so they do not hang loose. The cables will be required and accessible to reconnect the new unit.

5.6 AirSpeed Removal from the Pole Mounting Arm

To remove the AirSpeed unit from the pole mounting arm, perform the following:

1. Loosen then remove the two (2) M8 Hexhead bolts from the threaded holes on the lower portion of mounting arm.
2. Loosen the two (2) upper bolts on the mounting adaptor's upper slots.
3. Lift up the unit and slide off of the mounting adaptor loosened bolts.

Figure 54: Removal from the Mounting Arm

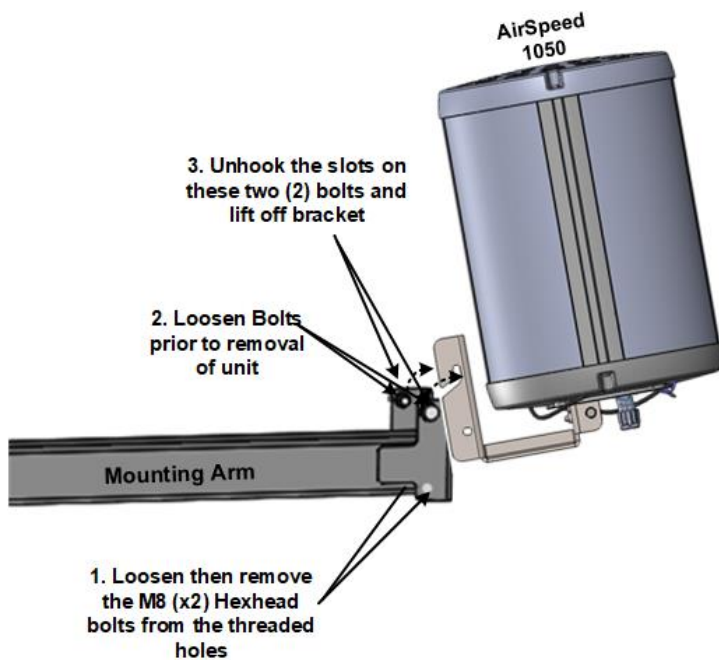

4. After removal of the unit replace the two (2) M8 Hexhead bolts to the threaded holes on the lower portion of mounting arm, for use when replacing the new unit.

A Job Sheet

This job sheet enables the users to keep track of their installation. It covers all the prerequisites required for accomplishing the AirSpeed 1050 B3 installation.

Site Requirements
<ul style="list-style-type: none"> ○ Installation location identified ○ Access restrictions (highway regulations, other services on pole, power pole) ○ Method of reaching desired positions (ladders, Elevated work platform) ○ Main fuse block available (where needed) ○ Configuration programming details known ○ All equipment items available at the installation site <ul style="list-style-type: none"> ○ AirSpeed 1050 B3 unit + mounting adaptor
Tools (For further information, see Verify the Tools.)
<ul style="list-style-type: none"> ○ Appropriate wrench's for unit assembly ○ Knife ○ pliers ○ Small side cutters ○ Tweezers (or fine blade long nose pliers) ○ Wire strippers
Required Ancillary Equipment
<ul style="list-style-type: none"> ○ Laptop PC for initial configuration ○ cable for temporary connection of the lap top

B Abbreviations

Term	Definition
AC	Alternating Current
BH	Backhaul
DC	Direct Current
eNb	eNodeB
ETH	Ethernet (cable)
FDD	Frequency Division Duplex
FTP	File Transfer Protocol
LTE	Long Term Evolution, marketed as "4G LTE", is a standard for wireless communication of high-speed data for mobile phones and data terminals
NEC	National Electric Code
UE	User Equipment
WEEE	Waste Electrical and Electronic Equipment