


GENERAL NOTES

1. DUE TO VARIABLES INVOLVED IN ROOF AND OTHER INSTALLATIONS, IT SHALL BE THE CUSTOMER'S OR INSTALLER'S RESPONSIBILITY TO PROVIDE STRUCTURALLY ADEQUATE SUPPORTS FOR PIER & ANCHOR CONNECTIONS. IT MAY ALSO BE NECESSARY FOR THE CUSTOMER OR INSTALLER TO SECURE THE SERVICE OF A LOCAL ENGINEER TO DETERMINE THAT INSTALLATION COMPLIES WITH LOCAL BUILDING CODES.
2. FOR USE WITH GUYED AND BRACKETED TOWERS ONLY.
3. DRAIN HOLES MUST BE KEPT OPEN FROM ALL OBSTRUCTION.

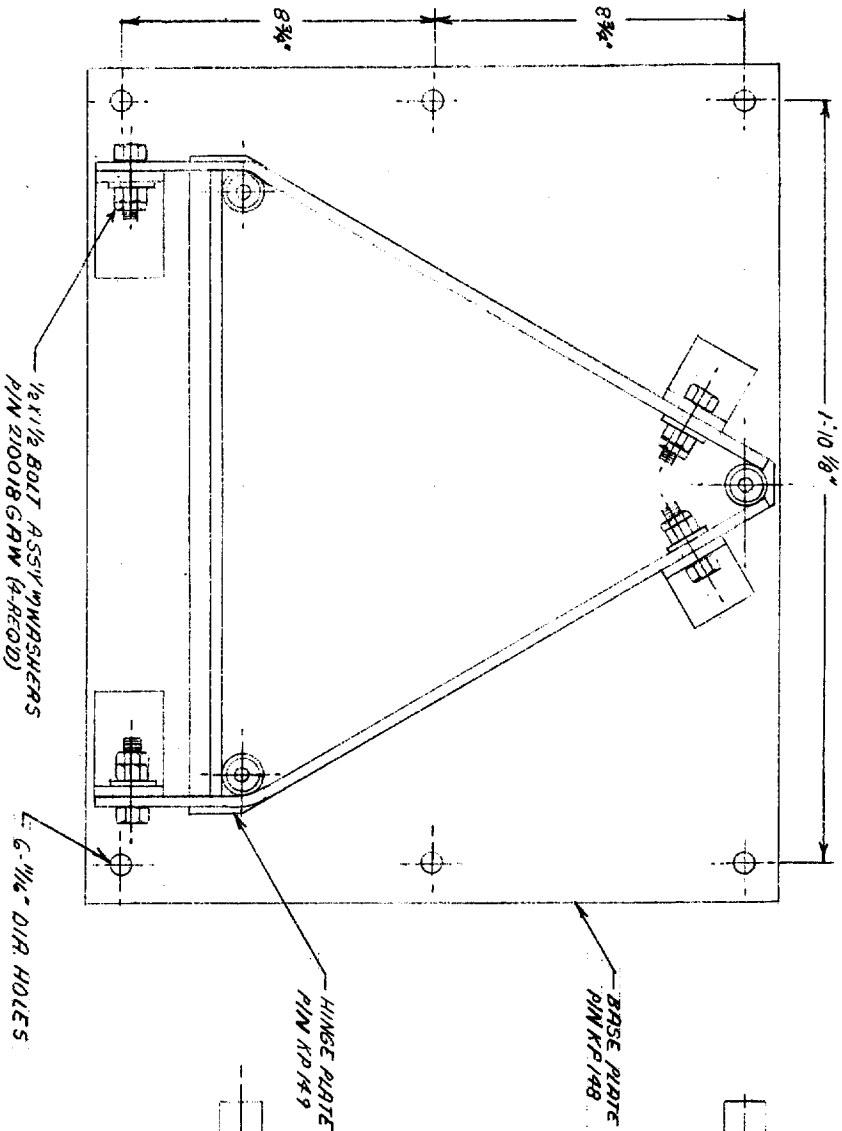

BILL OF MATERIAL			
ITEM	QTY.	PART NO.	DESCRIPTION
1	1	KP148	BASE PLATE
2	1	KP149	HINGE PLATE
3	4	2100/BSAW	1/2 X 1 1/2 BOLT ASSY W/ WASHERS

BPH 456

NOTE:
BE SURE HINGE BOLTS ARE
LOOSENED BEFORE ATTEMPTING
TO FOLD TOWER OVER.

No. 1 Revision Description		Date	By
Unarco-Rohn			
Division of Unarco Industries, Inc.			
HINGED BASE PLATE ASSEMBLY FOR MODEL 45 TOWER			
Scale	NONE	Drawn	12-6-78
Check	HTL	Engineer	12-19-78
Approved	WHD	Production	1-11-79
This drawing is the property of Unarco-Rohn. It is not to be reproduced, copied or used in whole or in part without our written consent.			
Approved by Sales	Date	Printing Number	C781578