



#GRD58 GROUND ROD DRIVER

DESCRIPTION

- Harger's Ground Rod Driver provides a safe, simple, effective and affordable way to install ground rods.
- The Ground Rod Driver drives a ground rod to ground level without the need of a stepladder or the use of a heavy sledgehammer.
- Drives the rod without deforming the end.
- Can be used on all types of ground rods, including copper-clad steel, galvanized and stainless steel.

EASY INSTALLATION



FEATURES

- The Ground Rod Driver includes the Driver Body with soft, rubber grips, an Insert for driving rods to ground level and a retaining strap to hold the insert in place during storage.
- Heavy-duty steel construction provides maximum driving forces, while the soft rubber ergonomic grip provides user comfort.
- The 5/8" and 3/4" Inserts are interchangeable with the standard Driver Body and prevent the Ground Rod Driver from slipping off the rod near ground level.
- The tool is completely self-contained and easy to store.

Catalog Number	Description	Ground Rod Size	Driver / Insert Length	Qty.	Approx. Wt. Each (lbs.)
GRD58	Driver & 5/8" Insert	1/2" & 5/8"	59"	EA	23
GRD34I	Replacement Insert	3/4"	35-1/2"	EA	6
GRD58I	Replacement Insert	5/8"	35-1/2"	EA	6