
Instruction Manual

FB40-4701-48DE





1. Prepare closure and accessories well




2. Prepare installation tools well (screwdriver, hacksaw, wrench, hot-air blower)




3. Saw off the cable ports from bottom by hacksaw




4. Put the cable through shrinkable sleeve and closure box

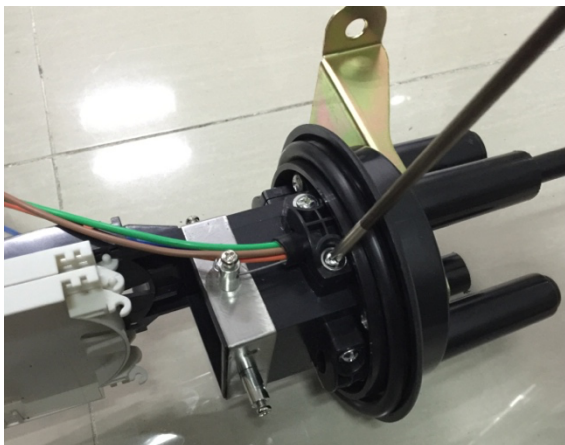


5. Use the screws fix the cable and cable strengthen by screwdriver

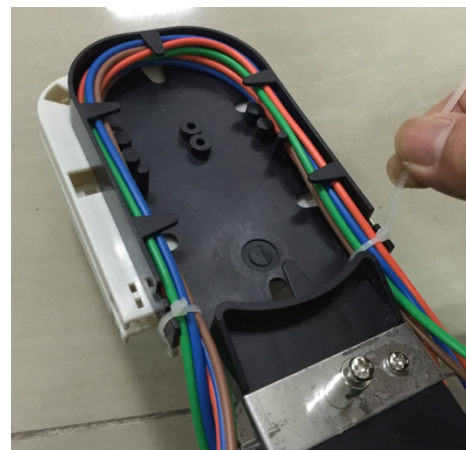

6. Coil the cable in back of splice tray and fix it by nylon tie.

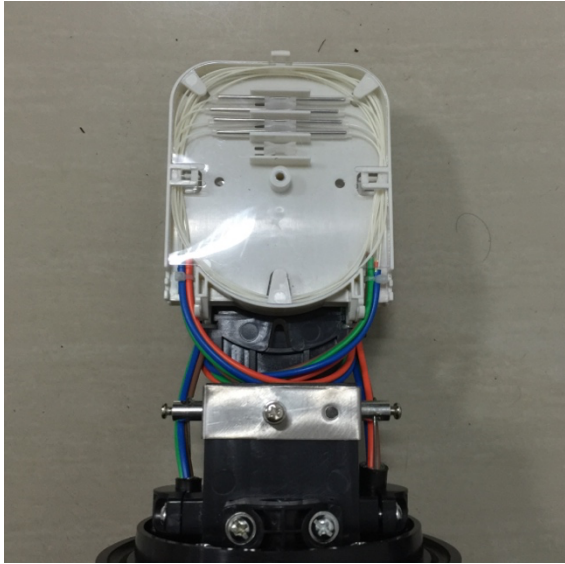

7. Splice and fix the cable in tray

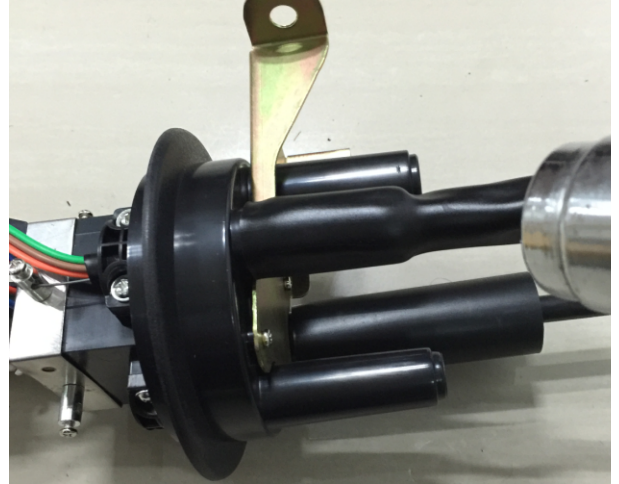

8. Sealing the shrinkable sleeve by hot-air blower



9. Put on the splice tray cover, rotate the hoop and compress it .



10. Fix on the hanging hook by wrench